
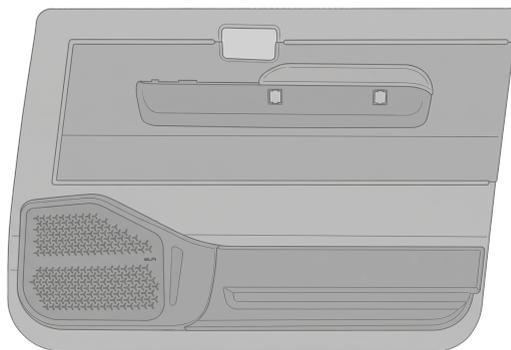


FRONT DOOR POD INSTALLATION GUIDE

TOYOTA 76 / 78 / 79 SERIES LANDCRUISER

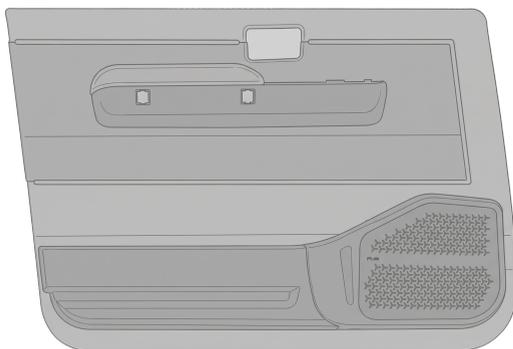

FRONT DOOR POD INSTALLATION GUIDE

Version: 2.0


Date: January 2026

Developed by: PVS Automotive


Before You Begin:

This guide outlines the correct drilling and installation procedure for PVS Automotive door pods.

Please read this page fully before drilling. Incorrect holes cannot be reversed.

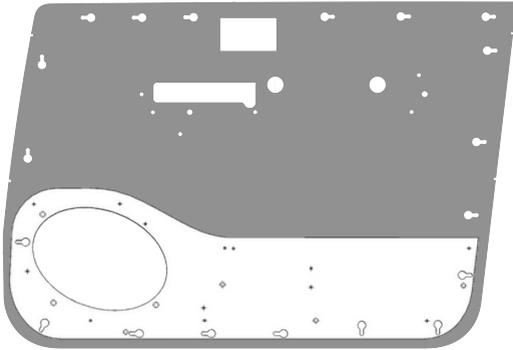

1

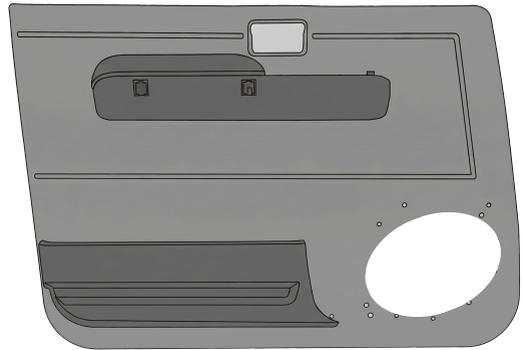

2

REMOVE POCKET & PREPARE DOOR CARD

Remove the original factory door pocket.

Position the supplied drilling template on the back of the door card. Align the template using the factory clip locations and use the clips to temporarily secure it in place.

Each kit includes two front templates. Use the template that matches your original clip hole layout.

Before drilling, confirm the door pod will be centred correctly on the door card.

Two drill bit sizes are required:

- 4mm mounting screw holes
- 10mm locating holes

Cut the 6x9" speaker opening using a jigsaw. 6.5" speakers can also be installed using the supplied adaptor.

MOUNT POCKET SECTION

Mount the door pod pocket section first using the supplied fasteners.

If any locating tabs snap or break during transit or installation, do not stress.

These tabs are used only for transport to hold the pocket and pod together and are not structural once installed.

Once the pocket is secured, alignment will be correct.

SUPPORT AND FEEDBACK

Email

support@pvsautomotive.com.au

For more details, visit
www.pvsautomotive.com.au


FRONT DOOR POD INSTALLATION GUIDE

Version: 2.0


Date: January 2026

Developed by: PVS Automotive

Continuation – Final Assembly

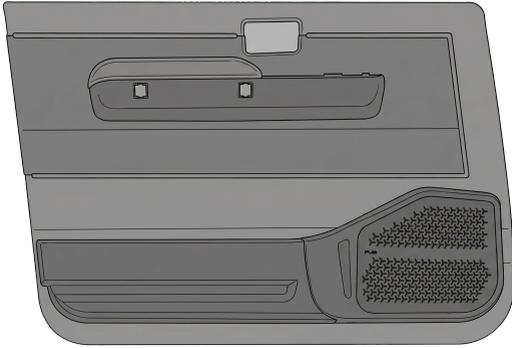

3

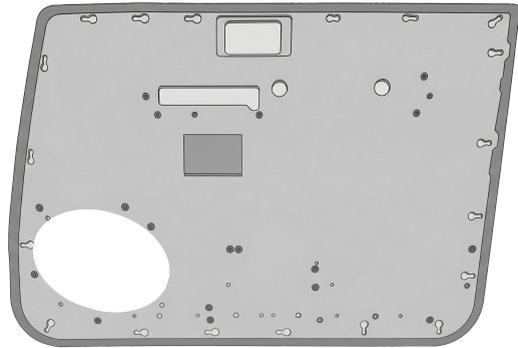

4

INSTALL SPEAKER DOOR POD

After the pocket section has been securely mounted, install the speaker door pod using the supplied screws.

The pod will slide into position over the locating tabs and fasten directly to the pocket.

Ensure the pod sits flush before tightening all fasteners.

FINAL CHECKS & WIRING

Confirm all screws are secure and not over-tightened.

Refit all door card clips.

Refer to the wiring installation guide online for speaker and accessory wiring instructions before final reassembly.

FINAL CHECKLIST

- Pocket securely mounted
- Speaker pod seated correctly
- Screws tightened correctly
- Door clips reinstalled
- Wiring guide followed

SUPPORT AND FEEDBACK

Email
support@pvsautomotive.com.au

For more details, visit
www.pvsautomotive.com.au

SUPPORT & TECHNICAL ASSISTANCE

If you have questions during installation, please contact our support team.

Email: support@pvsautomotive.com.au

Web: www.pvsautomotive.com.au



Professional installation is recommended if you are unsure.

PVS Automotive is not responsible for incorrect installation or damage caused during fitment.